




	1) Antisismi suspension	2) MRU	3) Knurled nut	4) Elios Tubular	5) BFØ6	6) TBØ4	7) Exstension Elios	8) MR	9) Extended Nut
Elements in the Packaging	х6	x24	x30	x12	x12	x48	х6	x24	х6
Elements for assembling 1 kit	х1	х4	х5	x2	x2	х8	х1	х4	х1
		00		900/1000 mm ————————————————————————————————					


N.B. Elements 2 and 3 are supplied in sealed transparent bag , where the quantities for assembling a **single kit** are contained inside

Seismic suspension assembly phase

Insert the MRU element (2) into the slots of the anti-seismic suspension

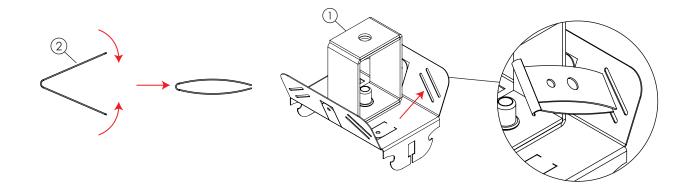


1- Anti-seismic suspension

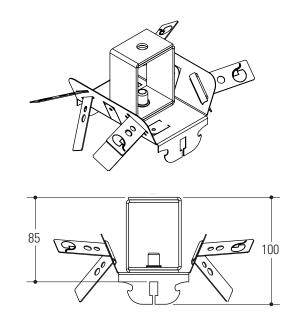





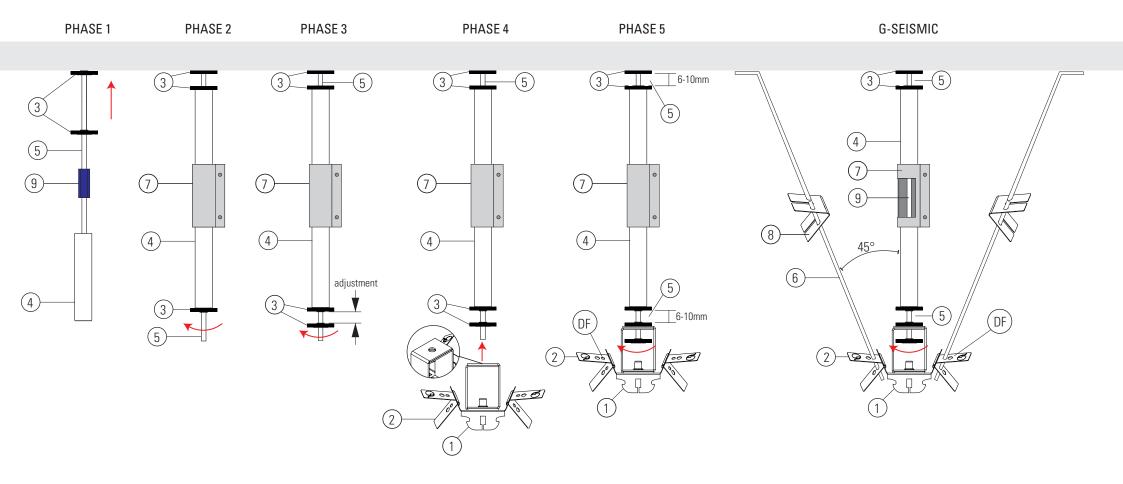

After securing the BFØ6 (5) to the ceiling, screw in the first two threaded washers (3) as in step 1, insert the Elios Tubular (4) from the bottom up and secure it by inserting another threaded washer (3) at the base, as in steps 1 and 2, insert another threaded washer to adjust the height of the system as in steps 2 and 3. Install the pre-assembled Anti-seismic Suspension (1) with the MRU (2), threading the BFØ6 (5) inside the hole located on the top, as indicated in step 4, secure everything by screwing in the last knurled washer as in step 5. The assembly of the G-SEISMIC is completed by fixing the TBØ4 to the floor, only after inserting them in the small hole of the MRU (2) as indicated in phase 5, in the D. F.

www.vertebra.com Rev. 01/2023 INSTALLATION INSTRUCTIONS